


## 1X-F Series Quick Operation Guide


### If you hear the buzzer

#### Determine the cause of the buzzer

If the buzzer is sounding and the Fire Alarm LEDs are flashing or steady, then it's a fire alarm.

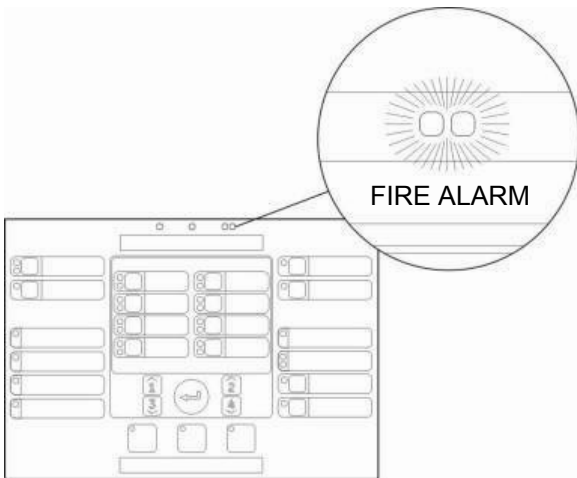

If the buzzer is sounding and the Fault LED is steady, then it's a fault.

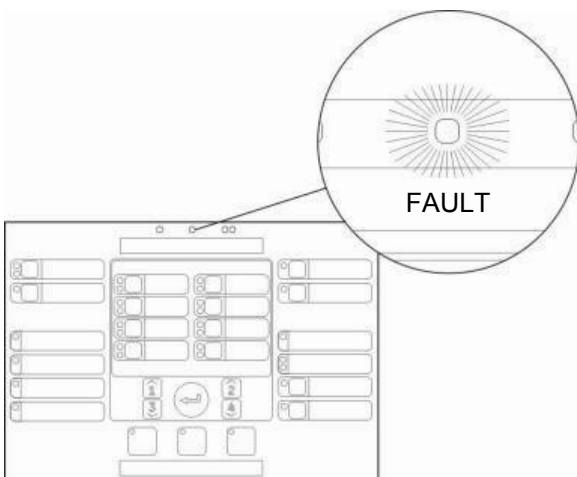


**WARNING:** Depending on your fire alarm system configuration, the buzzer may be your first indication of a fire alarm.

### For a fire alarm

#### 1. Determine the location of the fire

Check the location of the fire, indicated by the Zone Alarm LED.

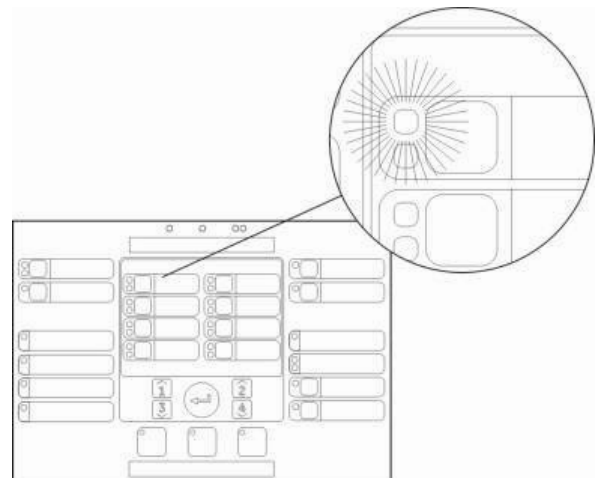

If Fire Alarm and Zone Alarm LEDs are flashing, the fire alarm has been activated by a detector. If they are steady, the fire alarm has been activated by a manual call point.

#### 2. Verify the fire alarm

If necessary, investigate the location of the fire alarm to confirm that the alarm is genuine.

Depending on the configuration of your fire alarm system, you may have up to ten minutes to investigate the alarm before sounders and other alarm notification devices are activated.


#### 3. Activate the sounders

If the fire alarm is verified, do either of the following to activate the sounders and other alarm notification devices immediately:

Break the nearest manual call point.

— or —

Press the Sounder Start/Stop button on the control panel. (This requires operator user level access.)

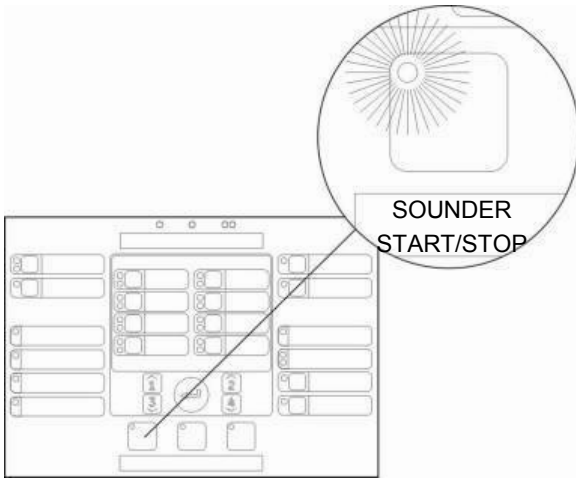

## For more information

This document includes basic control panel operation instructions to be followed in the event of a fire alarm or fault indication. For detailed operation, refer to the operation manual.

## Maintenance information

Inspect and test the fire alarm system in accordance with all applicable requirements and regulations.

### For service contact

Name: \_\_\_\_\_

Address: \_\_\_\_\_

\_\_\_\_\_

Telephone: \_\_\_\_\_

Copyright © 2011 UTC Fire & Security. All rights reserved.

### 4. Leave the building


Once the fire alarm has been confirmed and the fire alarm activated, leave the building and follow your company's evacuation drill.

## For a fault

**WARNING:** Never silence the buzzer without first investigating the cause of the warning signal.

### 1. Silence the buzzer

To silence the buzzer, press Panel Silence.

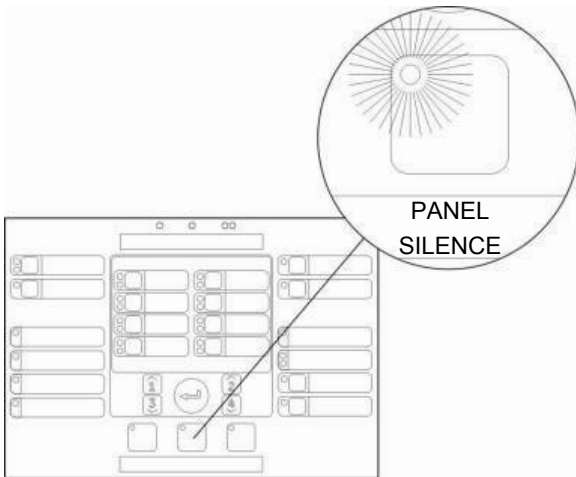

The Panel Silence LED turns on and the buzzer stops. New alarm or fault events will turn the buzzer back on.

### 2. Contact your maintenance contractor

Contact your maintenance contractor immediately to investigate and repair the fault.