



1 Mounting basis/ Montagegrundlage/ Base de montaje/ Монтажна основа

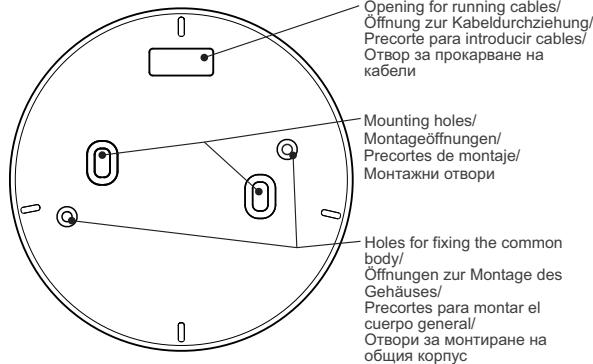


2 Address programming/ Adresse programmieren/ Programar dirección /Програмиране на адрес

- Use the cable with 5-pin terminal.
- Benutzen Sie das Kabel mit Klemme.
- Utilizar el cable con borne.
- Използвайте кабела с клема.

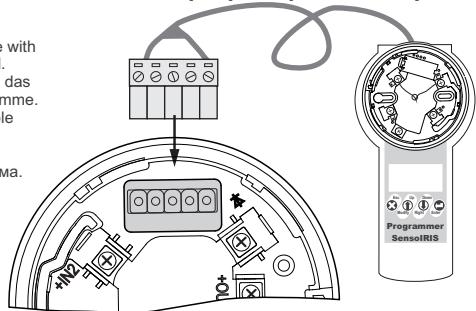


Note: You may also program the address directly from the fire panel.
Hinweis: Sie können die Adresse direkt im Bedienelement programmieren.
Observación: Ud. podrá programar la dirección directamente desde el panel.
Забележка: Можете да програмирате адреса и директно от панела.

3 Installation / Instalación / Инсталлиране

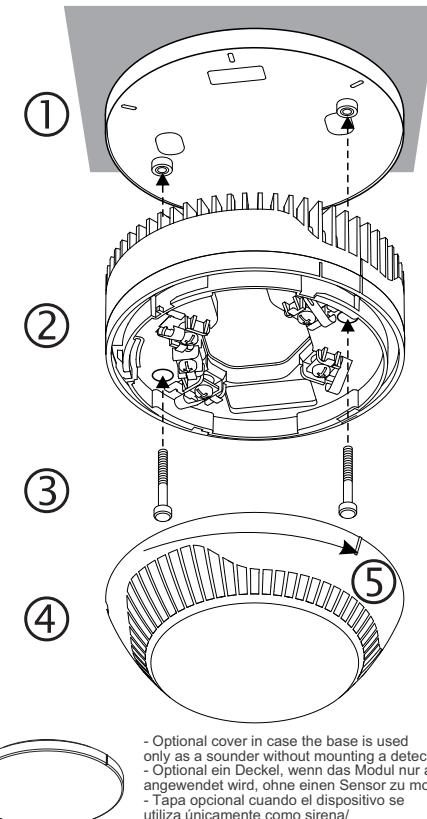

- Optional cover in case the base is used only as a sounder without mounting a detector/
- Optional ein Deckel, wenn das Modul nur als eine Sirene angewendet wird, ohne einen Sensor zu montieren.
- Tapa opcional cuando el dispositivo se utiliza únicamente como sirena/
- Опционална капачка, когато основата се използва само като сирена без да се монтира детектор

Wiring Diagrams / Verbindungsschema / Esquemas de conexión / Схеми на свързване

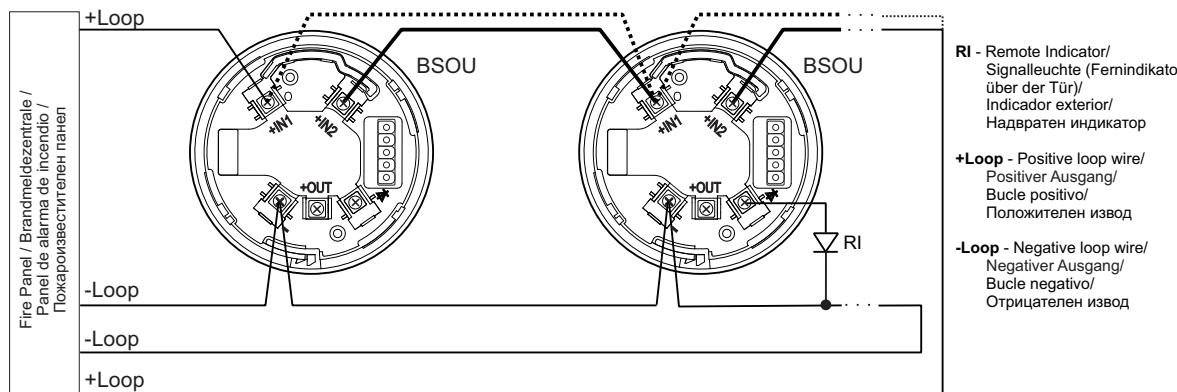

Tone types and description / Tontypen und Beschreibung / Tipos de sonidos y su descripción / Видове звуци и описание им

Tone	Tone Type	Tone Description / Application
1	—	970Hz
2	████████	800Hz/970Hz @ 2Hz
3	~~~~~	800Hz - 970Hz @ 1Hz
4	— — —	970Hz 1s OFF/1s ON
5	████████	970Hz, 0.5s/ 630Hz, 0.5s
6	██████	554Hz, 0.1s/ 440Hz, 0.4s (AFNOR NF S 32 001)
7	↑↑↑	500 - 1200Hz, 3.5s/ 0.5s OFF (NEN 2575:2000)
8	— — —	420Hz 0.625s ON/0.625s OFF (Australia AS1670 Alert tone)
9	↑↑↑	500 - 1200Hz, 0.5s/ 0.5s OFF x 3/1.5s OFF (AS1670 Evacuation)
10	████████	550Hz/440Hz @ 0.5Hz
11	---	970Hz, 0.5s ON/0.5s OFF x 3/ 1.5s OFF (ISO 8201)
12	---	2850Hz, 0.5s ON/0.5s OFF x 3/1.5s OFF (ISO 8201)
13	~~~~~	1200Hz - 500Hz @ 1Hz (DIN 33 404)
14	—	400Hz
15	████████	550Hz, 0.7s/1000Hz, 0.33s
16	~~~~~	1500Hz - 2700Hz @ 3Hz
17	—	750Hz
18	—	2400Hz
19	—	660Hz
20	— — —	660Hz 1.8s ON/1.8s OFF
21	— — —	660Hz 0.15s ON/0.15s OFF
22	████████	510Hz, 0.25s/ 610Hz, 0.25s
23	████████	800/1000Hz 0.5s each (1Hz)
24	~~~~~	250Hz - 1200Hz @ 12Hz
25	~~~~~	500Hz - 1200Hz @ 0.33Hz
26	~~~~~	2400Hz - 2900Hz @ 9Hz
27	~~~~~	2400Hz - 2900Hz @ 3Hz (2500Hz - main sound frequency/ Hauptfrequenz/ frecuencia básica/ основна честота)
28	~~~~~	800Hz - 970Hz @ 100Hz
29	~~~~~	800Hz - 970Hz @ 9Hz
30	~~~~~	800Hz - 970Hz @ 3Hz
31	— —	800Hz, 0.25s ON/1s OFF
32	↑↑↑↑↑↑	600Hz – 1100Hz, 2.6s/0.4s OFF